



6. Install by reversing these removal steps. Tighten all bolts securely.

**FRONT FENDER**

**Removal/Installation**

Refer to **Figure 5** for this procedure.





1. Disconnect the headlight electrical connectors (A, **Figure 6**).

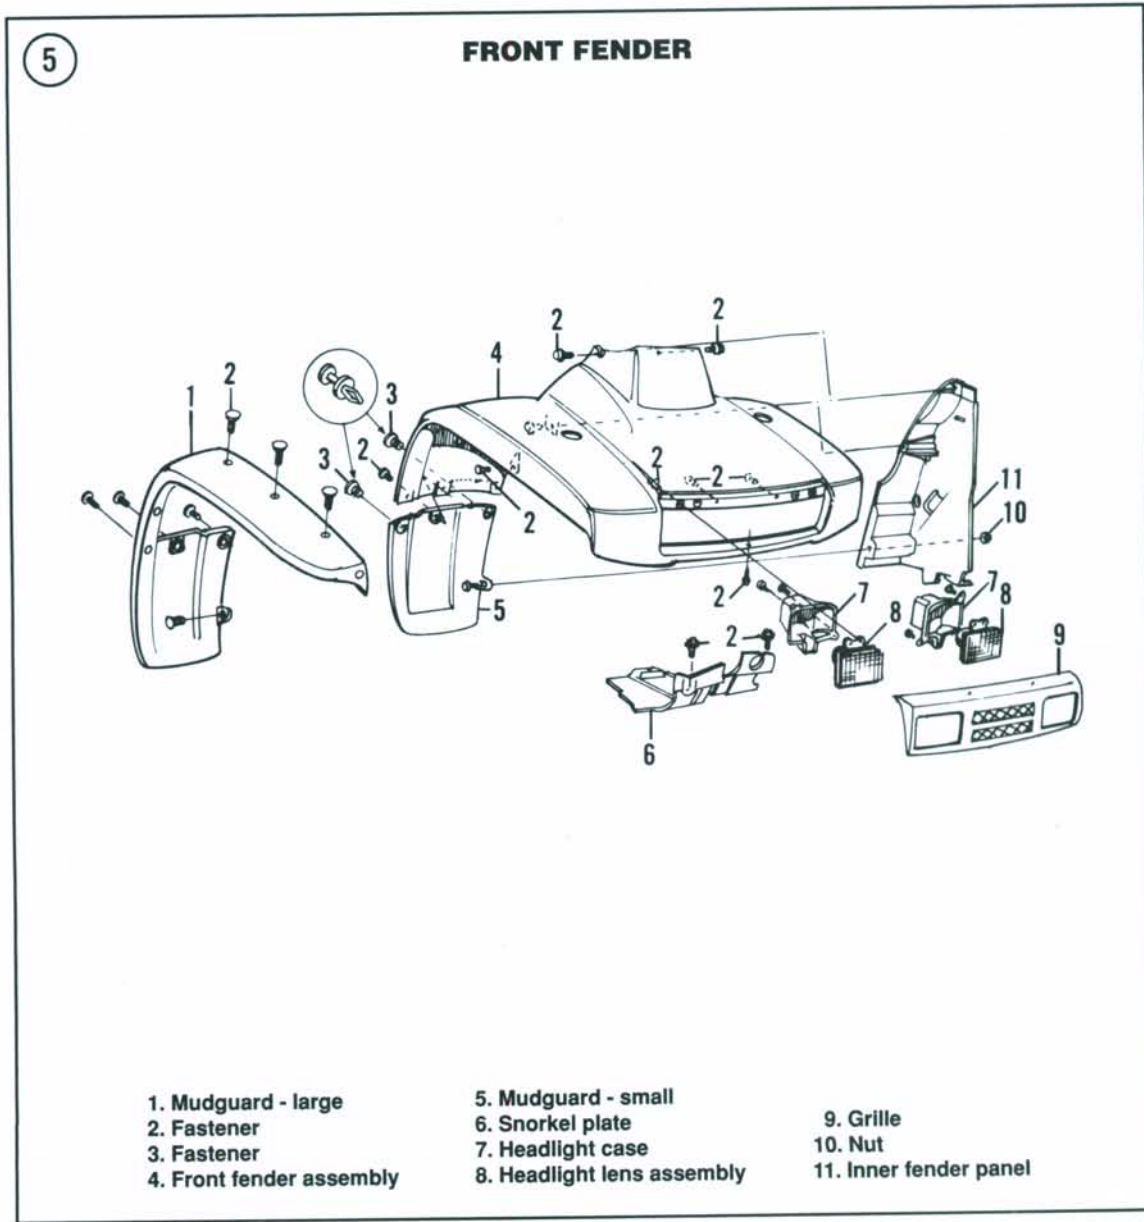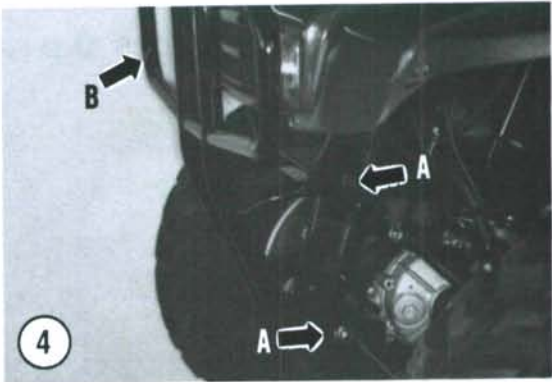

- 1. Mudguard - large
- 2. Fastener
- 3. Fastener
- 4. Front fender assembly

- 5. Mudguard - small
- 6. Snorkel plate
- 7. Headlight case
- 8. Headlight lens assembly

- 9. Grille
- 10. Nut
- 11. Inner fender panel

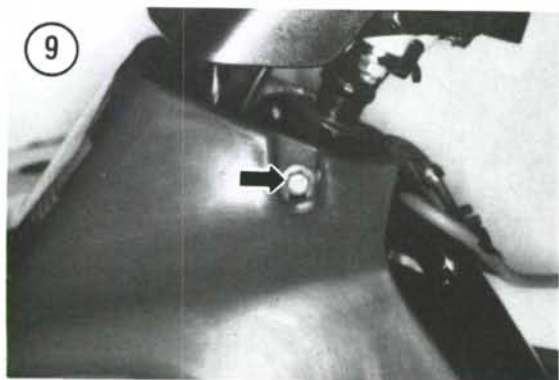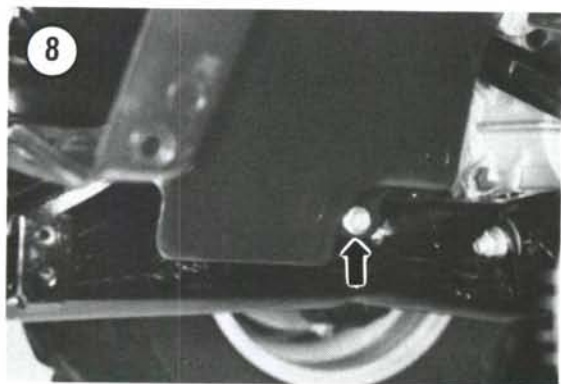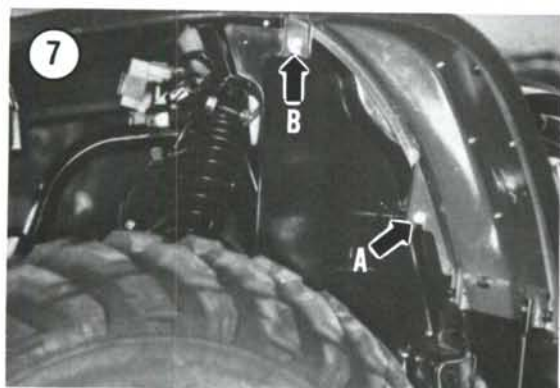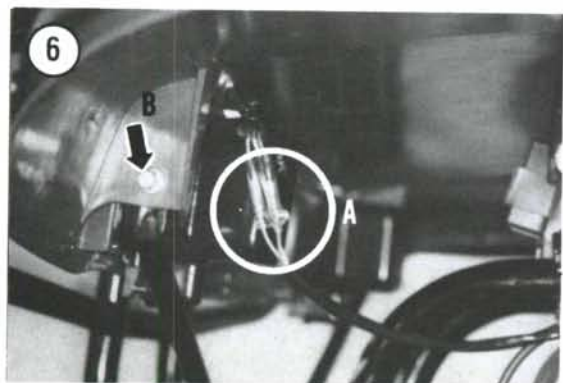


2. If so equipped, remove the front carrier and front luggage carrier as described in this chapter.
3. Under the front fender, loosen, but do not remove, the lower rear bolt (A, **Figure 7**) on each side.
4. Remove the following bolts under the front fender on each side:
  - a. The front bolt (B, **Figure 6**)
  - b. The rear lower bolt (**Figure 8**).
  - c. The rear upper bolt (B, **Figure 7**).
5. Remove the outer upper bolt (**Figure 9**) on each side.
6. Pull the front fender assembly slightly up then pivot it out toward the front to clear the handlebar and remove it from the frame.

#### NOTE


*It is not necessary to remove the following components unless they are to be replaced.*

7. To remove the mudguard (small or large version), remove the screws or special fasteners (after 1991) securing the mudguard and remove it from the front fender assembly.
8. To remove the inner fender panel, remove the screws and bolts and nuts securing the mudguard and remove it from the front fender assembly.
9. To remove the headlight assembly, perform the following:
  - a. Remove the screws (A, **Figure 10**) securing the headlight case (B, **Figure 10**) to the front fender and remove it.
  - b. Remove the screws (A, **Figure 11**) securing the headlight lens assembly (B, **Figure 11**) to the front fender grille and remove it.
10. To remove the grille assembly, perform the following:

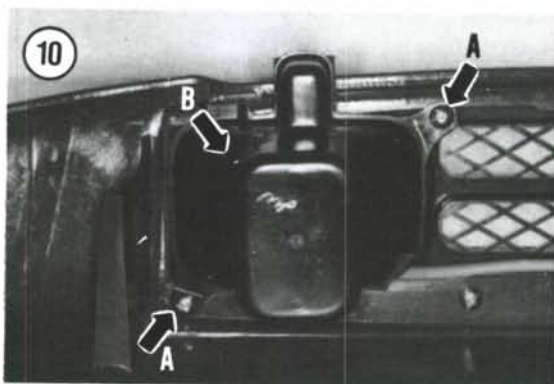

- a. Remove the center screw (A, **Figure 12**) and both side screws.
- b. Unhook the headlight electrical wires from the clips (B, **Figure 12**).
- c. Remove the 2 side screws (C, **Figure 12**).
- d. Remove the grille (D, **Figure 12**) and remove it from the front fender assembly.

11. Install by reversing these removal steps. Tighten all bolts, nuts and screws securely. Do not over-tighten as the plastic fender and related components may fracture.

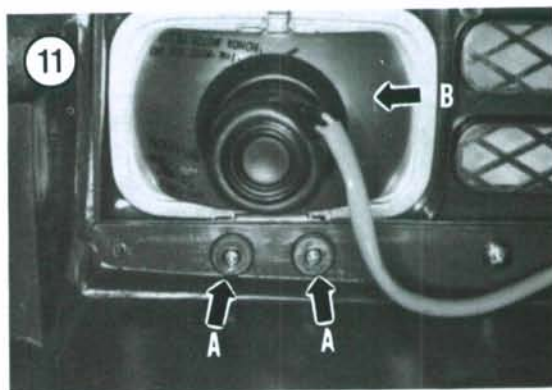


## REAR LUGGAGE CARRIER

### Removal/Installation

Refer to **Figure 1** for this procedure.

1. Remove the seat.
2. Remove the side bolts (**Figure 13**) and the top bolt (**Figure 14**) on each side securing the rear luggage carrier to the frame.
3. Left the rear luggage carrier straight up and off the rear fender and remove it.
4. Install by reversing these removal steps. Tighten all bolts securely. Do not overtighten as the plastic fender may fracture.


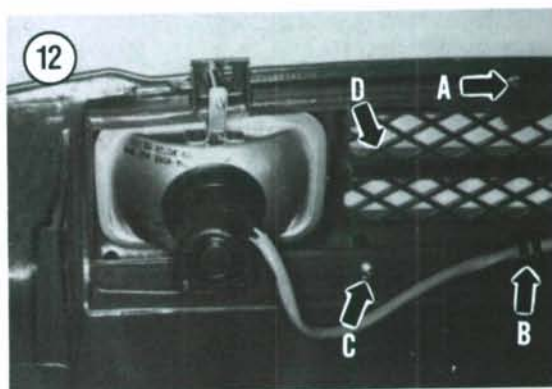


## REAR FENDER

### Removal/Installation

Refer to **Figure 15** for this procedure.

1. Remove the rear luggage carrier as described in this chapter.
2. Remove the battery as described in Chapter Three.
3. Disconnect the electrical connector from the tail-light/brake light assembly.
4. Open the tool box cover.
5. Remove the bolts (**Figure 16**) securing the tool box and remove the tool box assembly.
6. Remove the upper bolts (A, **Figure 17**) securing the rear fender to the frame.
7. On 1989-on models, remove the bolts (A, **Figure 18**) and plate securing the front mudguard to the bracket (B, **Figure 18**). Unhook the bracket from the foot peg.
8. Under the rear fender, remove the bolts (A, **Figure 19**) securing the rear fender mounting bracket to the

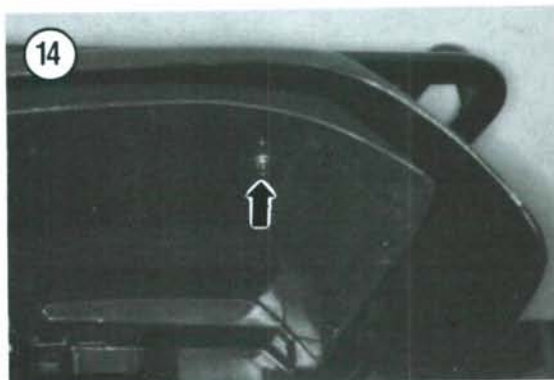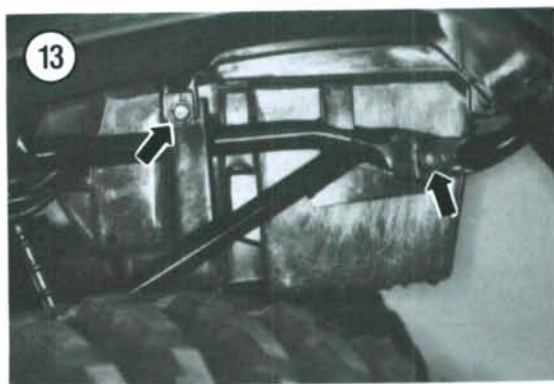

Copyright of Honda TRX300/FOURTRAX 300 & TRX300FW/FOURTRAX 300 4x4, 1988-2000 is the property of Penton Media, Inc. ("Clymer") and its content may not be copied or emailed to multiple sites or posted to a listserv without the copyright holder's express written permission. However, users may print, download, or email articles for individual use.